

PULSE FLEX



Quick Setup Guide

bluesound.com

Included Accessories



120V AC Power Cord or



230V AC Power Cord



Mini Jack to Toslink Adaptor

PULSE FLEX


All-in-one Portable
Wireless Streaming
Music System

English

Português

1

CONNECT TO POWER

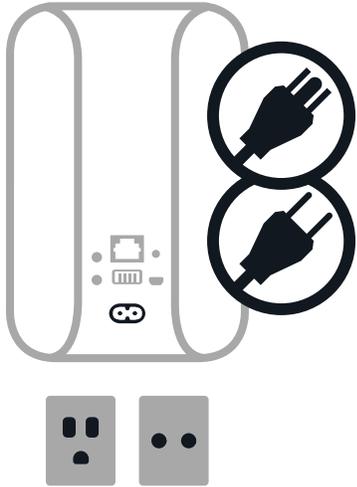

- A Select the AC Power Cord appropriate for your region and plug it into the Player, and then into your wall outlet.
- B The PULSE FLEX's LED button should turn Solid Green, indicating that the Player is in Hotspot Mode and ready to be added to your home WiFi network.

*Never force a power cord into a wall outlet.
An adaptor may be necessary in certain regions.*

2

CONNECT TO WiFi



- A On your tablet or smartphone, **look for the WiFi network (hotspot) matching your PULSE FLEX's unique network ID**, and join it. The network ID is listed as the product name (i.e. PULSE FLEX) immediately followed by the last four digits in the MAC (Machine Access Control) address (*example: PULSEFLEX-001A*). The full 12-digit MAC address is printed on a sticker on the back panel of your Player.
- B Open a web browser on your tablet or smartphone and enter **setup.bluesound.com**, and press "Go". A control panel page should then appear.
- C From the main menu displayed, select **Configure WiFi**.
- D Select **your home WiFi Network** from the **Configure Wireless** drop down menu.
- E Enter your home network's **Wireless Password** in the field provided (if it is a protected network).
- F Select a **Room Name** from the drop down list, or create a customized room name in the field provided.
- G Press **Update** and wait for the Player's light to turn solid blue, indicating that the Player has successfully joined your home WiFi network.
- H Repeat steps A-G for each additional Bluesound Player.
- I **Reselect your home WiFi network** from your tablet or smartphone's **main network settings**.

Alternatively, the PULSE FLEX can be connected directly to your wired home network or router using an Ethernet cable (not provided).

To see an instructional video on WiFi Setup, please visit www.bluesound.com

3

DOWNLOAD THE APP



All Bluesound Controller Apps for Apple iOS devices (iPhone, iPad, iPod), Android devices, Kindle Fire, and Windows or Mac desktops are available for download at www.bluesound.com/downloads

Congratulations, your Player setup is complete!

It's time to connect your music. Launch the App for the following playback options.



4

CONNECT TO MUSIC



Your Music : To play music stored on a computer or NAS device, open the Navigation Drawer by tapping  in the App, choose **Configure Player** from the menu, and select **Configure Network Shares**. Follow the screen prompts, and open every Room in your home to your entire digital music library.



Internet Radio : Simply select **TuneIn** from the **Music Services** menu, and find your favorite radio station. Or, explore and discover the thousands of radio stations streaming live 24/7 from anywhere on the planet via **TuneIn**.

For detailed information, please visit www.bluesound.com

Português

1 LIGAÇÃO À ALIMENTAÇÃO

- A Seleccione o Cabo de Alimentação CA adequado para a sua região e ligue-o ao leitor e, em seguida, à tomada de parede.
- B O botão LED do PULSE FLEX fica verde, indicando que o leitor está no Modo Hotspot e está pronto para ser adicionado à sua rede Wi-Fi doméstica.

Nunca introduza um cabo de alimentação numa tomada de parede à força. Em determinadas regiões, pode ser necessário utilizar um adaptador.

2 LIGAÇÃO A Wi-Fi

- A No seu tablet ou smartphone, **procure a rede Wi-Fi (hotspot) que corresponde à ID de rede única do seu PULSE FLEX** e efectue a associação. A ID de rede é apresentada como o nome de produto (i.e. PULSE FLEX) imediatamente seguido pelos últimos quatro dígitos no endereço MAC (Machine Access Control) (exemplo: **PULSEFLEX-001A**). O endereço MAC completo de 12 dígitos está impresso num autocolante no painel traseiro do leitor.
- B Abra um navegador de Internet no seu tablet ou smartphone, introduza **setup.bluesound.com** e carregue em "Ir". Deverá aparecer uma página de controlo.
- C A partir do menu principal apresentado, seleccione **Configure Wi-Fi** (Configurar Wi-Fi).
- D Seleccione a sua rede Wi-Fi doméstica a partir do menu pendente **Configure Wireless** (Configurar Sem Fios).
- E Introduza a **Wireless Password** (Palavra-passe Sem Fios) da sua rede doméstica no campo fornecido (no caso de ser uma rede protegida).
- F Seleccione um **Room Name** (Nome de Divisão) a partir da lista pendente, ou crie um nome de divisão personalizado no campo fornecido.
- G Prima **Update** (Actualizar) e aguarde até que a luz da unidade fique azul, indicando que o leitor se associou com êxito à sua rede Wi-Fi doméstica.
- H Repita os passos A-G para cada dispositivo Bluesound adicional.
- I **Volte a seleccionar a sua rede Wi-Fi doméstica a partir das definições de rede principal** do seu tablet ou smartphone.

Em alternativa, pode ligar o PULSE FLEX directamente ao seu router ou rede doméstica com fios utilizando um cabo Ethernet (não incluído).

Para ver um vídeo de instruções sobre a Configuração Wi-Fi, visite www.bluesound.com

3 TRANSFERÊNCIA DA APLICAÇÃO

Todas as aplicações Bluesound Controller para dispositivos com o sistema iOS da Apple (iPhone, iPad, iPod), dispositivos Android, Kindle Fire e Windows ou Mac Desktop Control estão disponíveis para transferência em www.bluesound.com/downloads.

Parabéns, a configuração do leitor está concluída!

Está na altura de ligar à sua música. Inicie a aplicação para obter as seguintes opções de reprodução.

4 LIGAÇÃO À MÚSICA

Your Music (A Sua Música): Para reproduzir música armazenada num computador ou dispositivo NAS, seleccione o ícone (H) na aplicação, seleccione **Configure Player** (Configurar Leitor) a partir do menu e seleccione **Configure Network Shares** (Configurar Partilhas de Rede). Siga as instruções no ecrã e abra cada divisão da sua casa a toda a sua biblioteca de música digital.

Internet Radio: Seleccione simplesmente **TuneIn** no menu **Music Services** (Serviços de Música) e encontre a sua estação de rádio favorita. Ou, explore e descubra milhares de estações de rádio que transmitem em directo 24 horas, 7 dias por semana, em todo o mundo através do **TuneIn**.

Para obter informações pormenorizadas, visite www.bluesound.com

BLUESOUND®

© Bluesound International. Bluesound, the stylized wordmark and “B” logotype, the phrase “HiFi for a wireless generation”, PULSE FLEX and all other Bluesound product names and taglines are trademarks or registered trademarks of Bluesound International, a division of Lenbrook Industries Limited. All other logos and services are trademarks or service marks of their respective owners.