

POWERNODE 2



Quick Setup Guide

bluesound.com

Included Accessories



120V AC Power Cord



230V AC Power Cord



Ethernet Cable



Mini Jack to Toslink Adaptor

POWERNODE 2 Amplified Wireless Streaming Music Player

English



Português

1

CONNECT FOR SOUND

- A Connect one end of the speaker wires (not included) to the terminals on the back of the POWERNODE 2.
- B Connect the other end of the speaker wires to each corresponding speaker. Make sure the "+" (red) terminal and "-" (black) terminal are connected to the corresponding "+" and "-" terminals of the loudspeaker. Use extra care to ensure that no stray wires or strands cross between posts or terminals at either end.

A subwoofer can also be connected directly to the POWERNODE 2. Subwoofer cable not included.

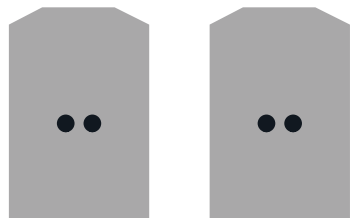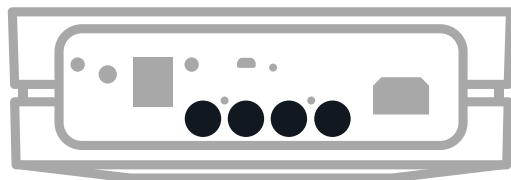


2

CONNECT TO POWER


- A Select the AC Power Cord appropriate for your region and plug it into the Player, and then into your wall outlet.
- B The POWERNODE 2's LED button should turn Solid Green, indicating that the Player is in Hotspot Mode and ready to be added to your home WiFi network.

*Never force a power cord into a wall outlet.
An adaptor may be necessary in certain regions.*

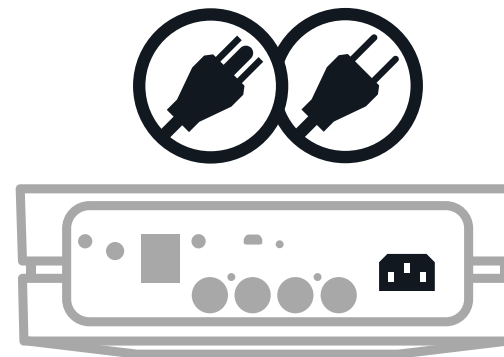

3

CONNECT TO WIFI

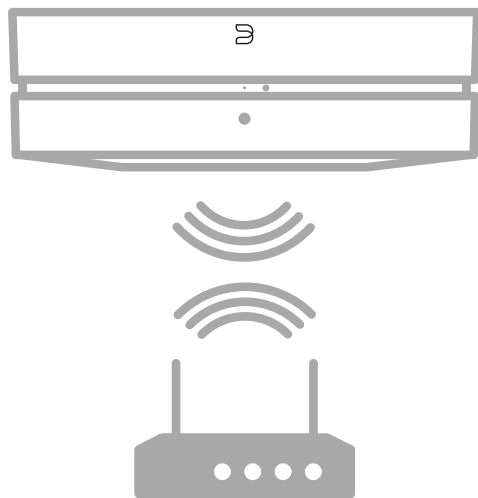


- A On your tablet or smartphone, **look for the WiFi network (hotspot) matching your POWERNODE 2's unique network ID**, and join it. The network ID is listed as the product name (i.e. POWERNODE 2) immediately followed by the last four digits in the MAC (Machine Access Control) address (example: **POWERNODE2-001A**). The full 12-digit MAC address is printed on a sticker on the back panel of your Player.
- B Open a web browser on your tablet or smartphone and enter **setup.bluesound.com**, and press "Go". A control panel page should then appear.
- C From the main menu displayed, select **Configure WiFi**.
- D Select **your home WiFi network** from the **Configure Wireless** drop down menu.
- E Enter your home network's **Wireless Password** in the field provided (if it is a protected network).
- F Select a **Room Name** from the drop down list, or create a customized Room name in the field provided.
- G Press **Update** and wait for the Player's light to turn solid blue, indicating that the Player has successfully joined your home WiFi network.
- H Repeat steps A-G for each additional Bluesound Player.
- I **Reselect your home WiFi network** from your tablet or smartphone's **main network settings**.

Alternatively, the POWERNODE 2 can be connected directly to your wired home network or router using the Ethernet cable provided.

To see an instructional video on WiFi Setup, please visit www.bluesound.com

4

DOWNLOAD THE APP

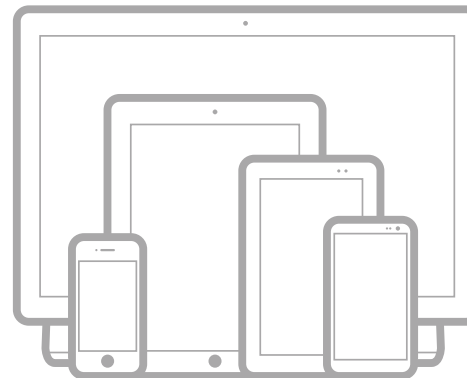

All Bluesound Controller Apps for Apple iOS devices (iPhone, iPad, iPod), Android devices, Kindle Fire, and Windows or Mac desktops are available for download at www.bluesound.com/downloads

Congratulations, your Player setup is complete!

It's time to connect your music. Launch the App for the following playback options.



CONNECT TO MUSIC



Your Music : To play music stored on a computer or NAS device, open the Navigation Drawer by tapping the menu icon in the App, choose **Configure Player** from the menu, and select **Configure Network Shares**. Follow the screen prompts, and open every Room in your home to your entire digital music library.

Internet Radio : Simply select **Tuneln** from the **Music Services** menu, and find your favorite radio station. Or, explore and discover the thousands of radio stations streaming live 24/7 from anywhere on the planet via **Tuneln**.

For detailed information, please visit www.bluesound.com

Português

1 LIGAÇÃO PARA SOM

- A Ligue uma extremidade dos fios das colunas (não incluídos) aos terminais da parte posterior do POWERNODE 2.
- B Ligue a outra extremidade dos fios das colunas a cada coluna correspondente. Certifique-se de que os terminais “+” (vermelho) e “-” (preto) estão ligados aos terminais “+” e “-” correspondentes do altifalante. Tenha extremo cuidado para garantir que os fios soltos ou pontas soltas não ficam presos entre os postos ou terminais em qualquer uma das extremidades.

Também é possível ligar um Subwoofer directamente ao POWERNODE 2. Cabo do subwoofer não incluído.

2 LIGAÇÃO À ALIMENTAÇÃO

- A Selecione o Cabo de Alimentação CA adequado para a sua região e ligue-o ao leitor e, em seguida, à tomada de parede.
- B O botão LED do POWERNODE 2 fica verde, indicando que o leitor está no Modo Hotspot e está pronto para ser adicionado à sua rede Wi-Fi doméstica.

Nunca introduza um cabo de alimentação numa tomada de parede à força. Em determinadas regiões, pode ser necessário utilizar um adaptador.

3 LIGAÇÃO A Wi-Fi

- A No seu tablet ou smartphone, **procure a rede Wi-Fi (hotspot) que corresponde à ID de rede única do seu POWERNODE 2** e efectue a associação. A ID de rede é apresentada como o nome de produto (i.e. POWERNODE 2) imediatamente seguido pelos últimos quatro dígitos no endereço MAC (Machine Access Control) (exemplo: **POWERNODE2-001A**). O endereço MAC completo de 12 dígitos está impresso num autocolante no painel traseiro do leitor.
- B Abra um navegador de Internet no seu tablet ou smartphone, introduza **setup.bluesound.com** e carregue em “Ir”. Deverá aparecer uma página de painel de controlo.
- C A partir do menu principal apresentado, selecione **Configure Wi-Fi** (Configurar Wi-Fi).
- D Selecione a sua rede Wi-Fi doméstica a partir do menu pendente **Configure Wireless** (Configurar Sem Fios).
- E Introduza a **Wireless Password** (Palavra-passe Sem Fios) da sua rede doméstica no campo fornecido (no caso de ser uma rede protegida).

- F Selecione um **Room Name** (Nome de Divisão) a partir da lista pendente, ou crie um nome de divisão personalizado no campo fornecido.
- G Prima **Update** (Atualizar) e aguarde até que a luz da unidade fique azul, indicando que o leitor se associou com êxito à sua rede Wi-Fi doméstica.
- H Repita os passos A-G para cada dispositivo Bluesound adicional.
- I **Volte a seleccionar a sua rede Wi-Fi doméstica a partir das definições de rede principal** do seu tablet ou smartphone.

Em alternativa, pode ligar o POWERNODE 2 directamente ao seu router ou rede doméstica com fios utilizando o cabo Ethernet fornecido.

Para ver um vídeo de instruções sobre a Configuração Wi-Fi, visite www.bluesound.com

4 TRANSFERÊNCIA DA APLICAÇÃO

Todas as aplicações Bluesound Controller para dispositivos com o sistema iOS da Apple (iPhone, iPad, iPod), dispositivos Android, Kindle Fire e Windows ou Mac Desktop Control estão disponíveis para transferência em **www.bluesound.com/downloads**

Parabéns, a configuração do leitor está concluída!

Está na altura de ligar à sua música. Inicie a aplicação para obter as seguintes opções de reprodução.

LIGAÇÃO À MÚSICA

Your Music (A Sua Música): Para reproduzir música armazenada num computador ou dispositivo NAS, selecione o ícone (t) na aplicação, selecione **Configure Player** (Configurar Leitor) a partir do menu e selecione **Configure Network Shares** (Configurar Partilhas de Rede). Siga as instruções no ecrã e abra cada divisão da sua casa a toda a sua biblioteca de música digital.

Internet Radio: Selecione simplesmente **Tuneln** no menu **Music Services** (Serviços de Música) e encontre a sua estação de rádio favorita. Ou, explore e descubra milhares de estações de rádio que transmitem em directo 24 horas, 7 dias por semana, em todo o mundo através do **Tuneln**.

Para obter informações pormenorizadas, visite www.bluesound.com

BLUESOUND®

© Bluesound International. Bluesound, the stylized wordmark and "B" logotype, the phrase "HiFi for a wireless generation", POWERNODE 2 and all other Bluesound product names and taglines are trademarks or registered trademarks of Bluesound International, a division of Lenbrook Industries Limited. All other logos and services are trademarks or service marks of their respective owners.